


Spare parts list

# 101 Music stand

10100-013-11 - nickel-colored

\*Rev 03

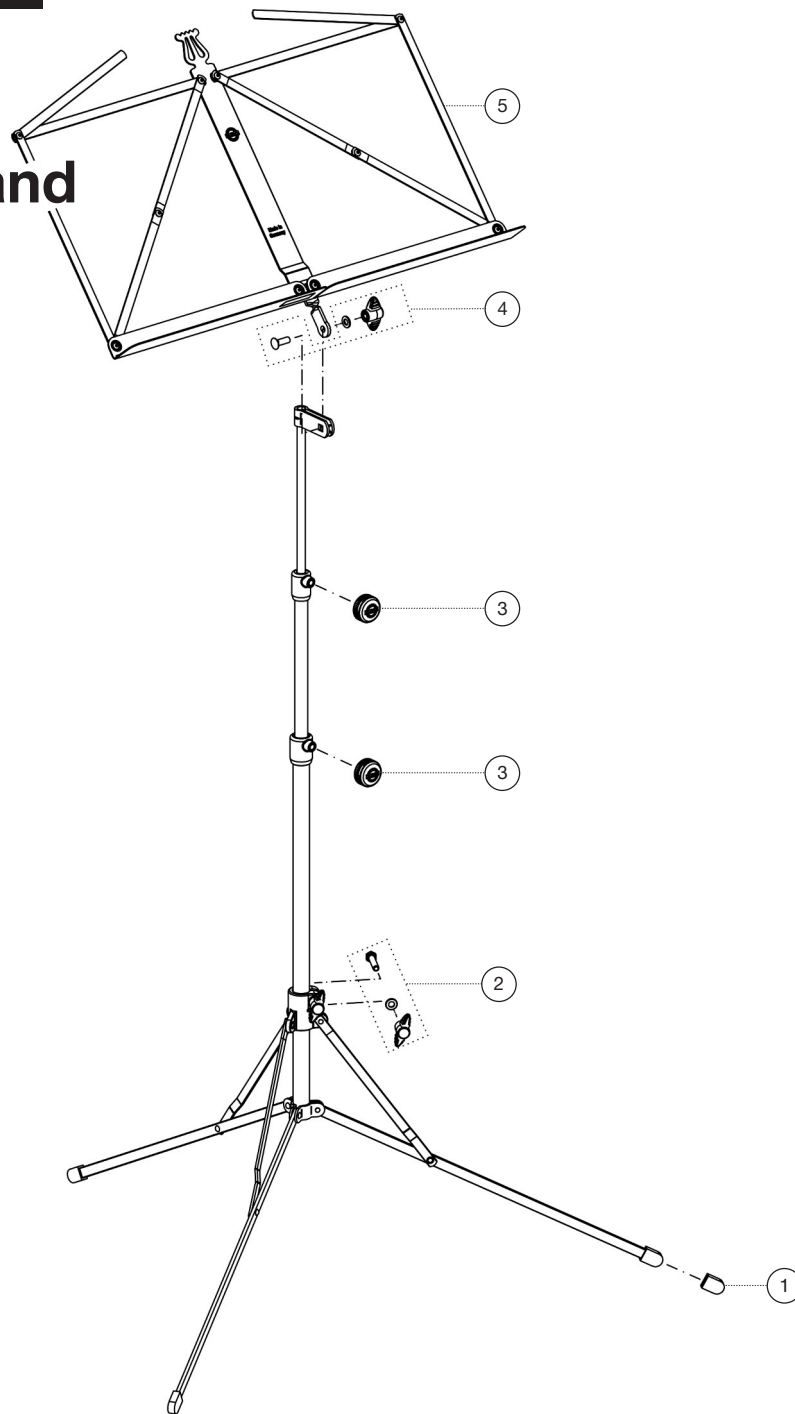

Position	Description	Article No.	Quantity
1	End cap	<a href="#">01-94-550-55</a>	3
2	Clamp screw connection	3-00-000-012	1
3	Knurled screw with logo M5 x 9 mm	01-82-802-55	2
4	Screw connection of the music desk	3-00-000-011	1
5	Music desk complete	6-10100-1-11	1